

Wonder OSC-Commands

Parametertypes: i = int, f = float, s = string

Note: all commands have to be prefixed with /WONDER

Destination	LAN IP	WiFi IP	Port
	192.168.3.1	192.168.14.100	58100

Command	Parameters	content	>
/source/activate	i	id				
/source/deactivate	i	id				
/source/type	i i	id	type [0=plane, 1=point]			
/source/angle	i f	id	angle [degrees]			
/source/angle	i f f	id	angle [degrees]	duration [seconds]		
/source/position	i f f	id	x coordinate [meters]	y coordinate [meters]		
/source/position	i f f f	id	x coordinate [meters]	y coordinate [meters]	duration [seconds]	
/source/color	i i i i	id	red [0;255]	green [0;255]	blue [0; 255]	
/project/createWithoutScore	s	projectname				
/project/load	s	projectname				
/project/save						
/project/save	s	projectname				
/stream/render/connect	s	name				
/stream/render/connect	s s	host	port			
/stream/render/connect	none					
/stream/visual/connect	s	name				
/stream/visual/connect	s s	host	port			
/stream/visual/connect	none					